




SIMBA

Butterfly Model

JS-C001

- Prior to installation, please check received items against the "Parts List".
- Please report any missing items to your retailer immediately.
- Professional installation recommended.

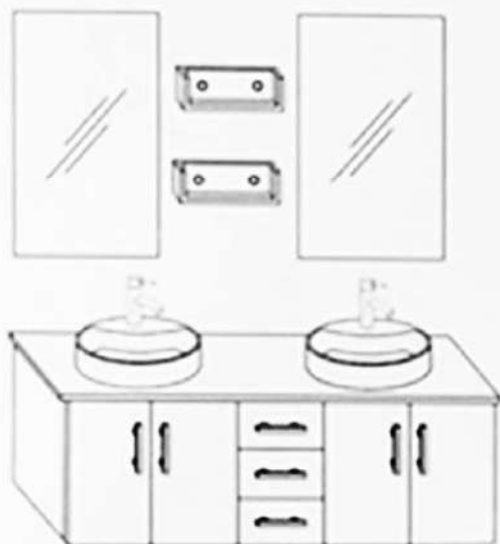

Parts List

a		7x	A	470*470*15mm		1x
b1		4x	B	470*470*15mm		1x
b2		4x	C	455*452mm		1x
c		6x	D	455*452mm		1x
d	M7*40mm	46x	E	1500*500mm		1x
e	Φ16	90x	F	1450*468mm		1x
g		90x	G	1450*100*15mm		1x
i		4x	H	1450*100*15mm		1x
j		4x	I	468*294*18mm		2x
k		4x	J	468*294*18mm		2x
m		4x	K	294*154*18mm		3x
n		4x	L	300*100*15mm		3x
o		4x	M	300*100*15mm		3x
p		4x				
q	M4*2mm	14x	O	225*100*15mm		3x
r	3.5*1.6mm	110x	P	294*235*5mm		3x
t		2x	Q	135*120*15mm		2x
aa	Φ47x2mm	4x	R	135*120*15mm		2x
ab	Φ47*Φ37x2mm	2x	S	318*120*15mm		2x
ac		4x	T	318*120*15mm		2x

Tools List (Tools not included)



Electric drill



Tape measure



Silicone



Adjustable wrench



Drill bit



Pencil








Screwdriver



Spirit level

- Mark the position of the screw holes on the wall by measuring the space between the centers of the mounting brackets on the back of the vanity.
- Vertical position (X) is decided by the purchaser - remember to mark low enough to accommodate the sink on the top of the vanity counter or it will be too high when installed. Use a spirit level to ensure the screws holes are horizontal.

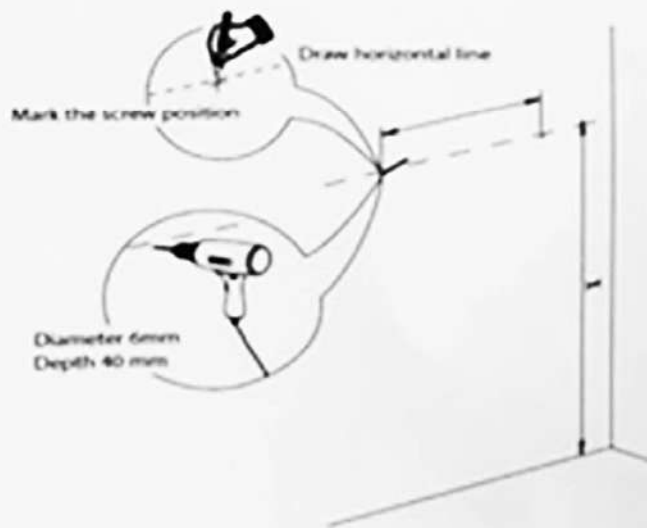


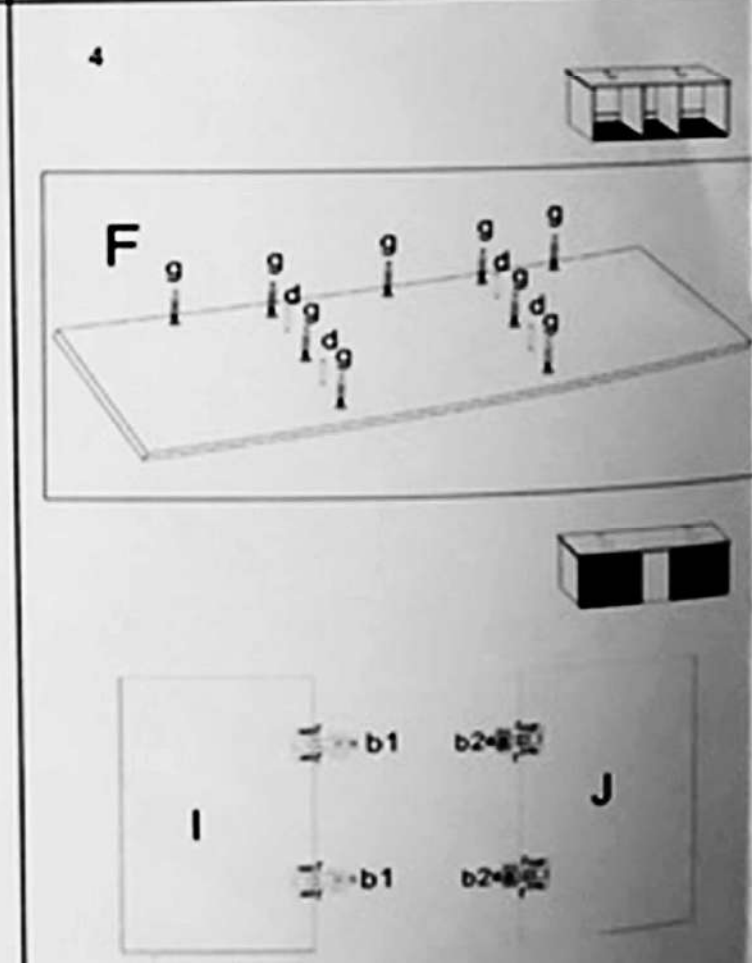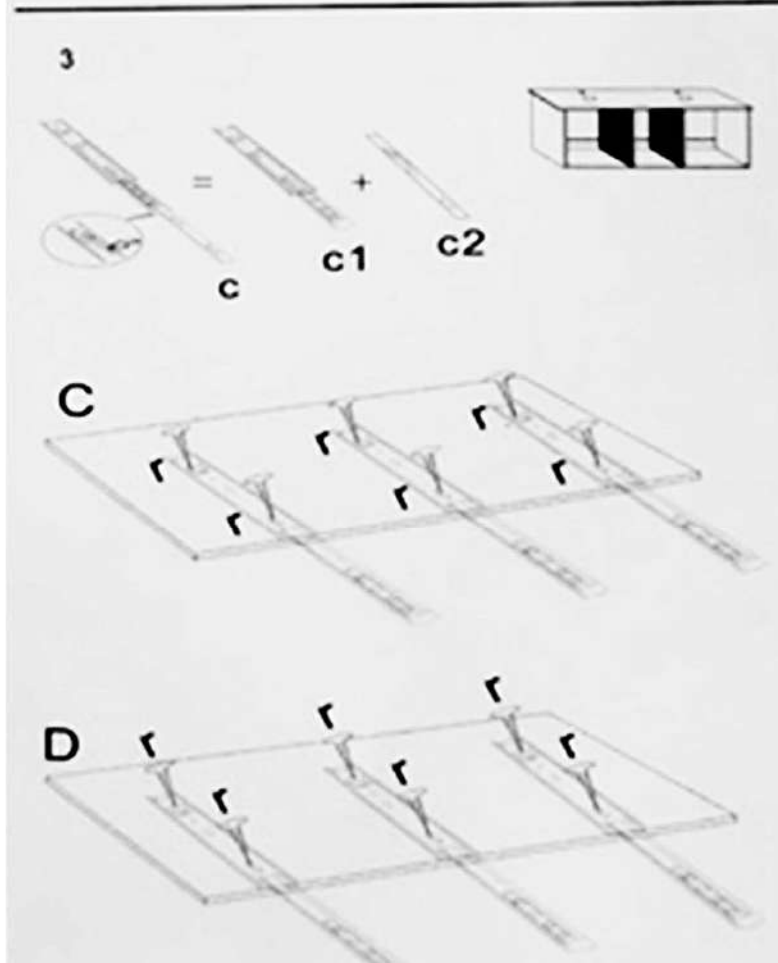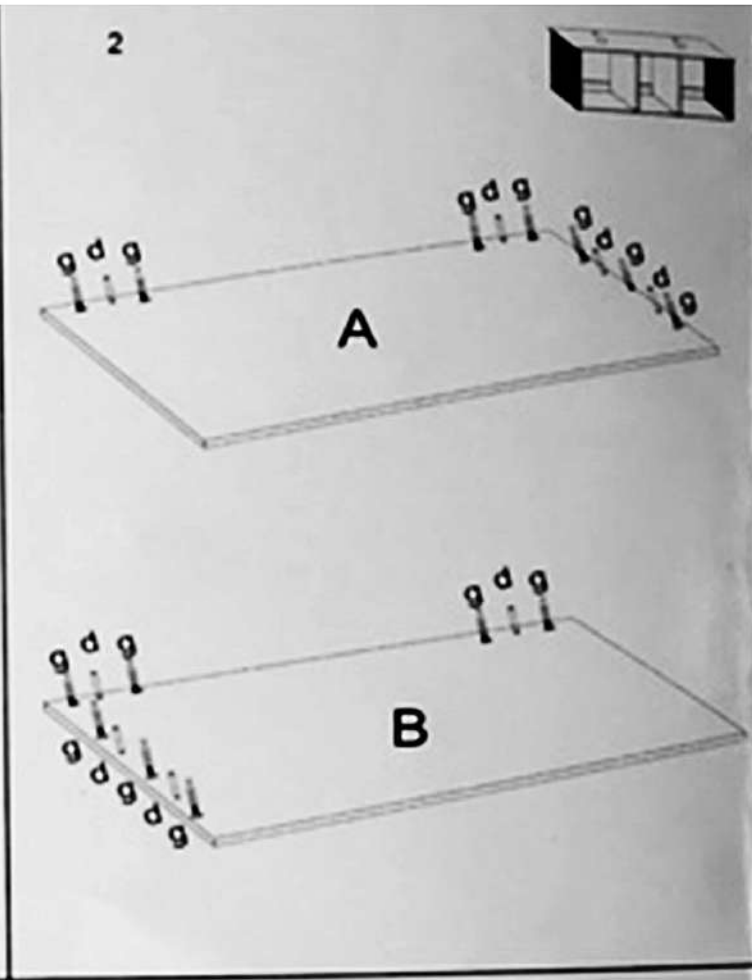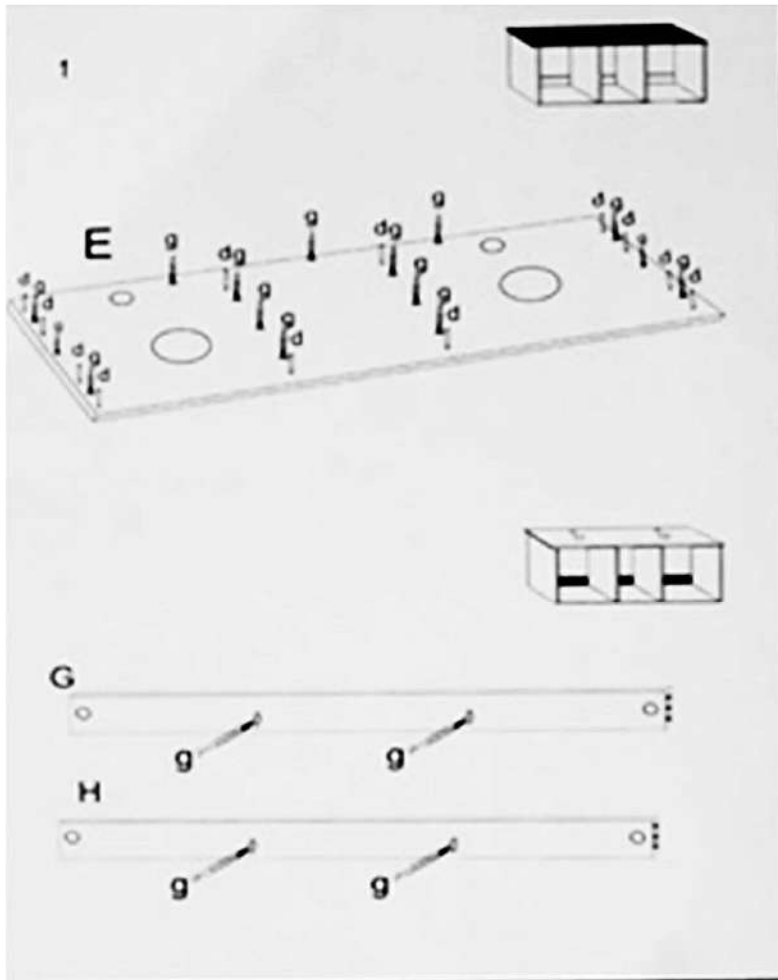





SIMBA

5

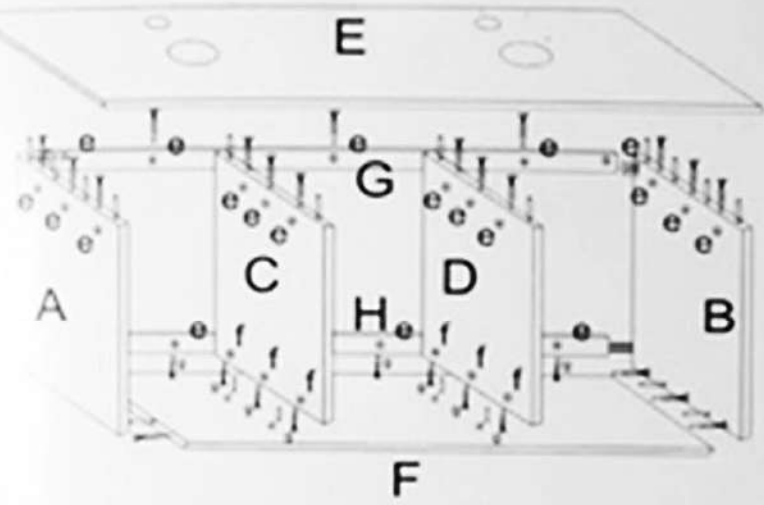

6

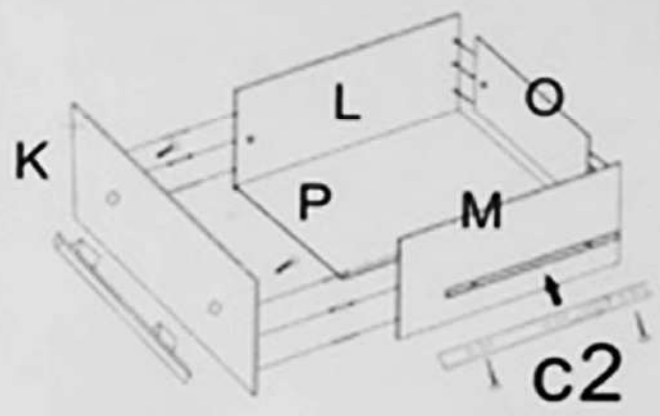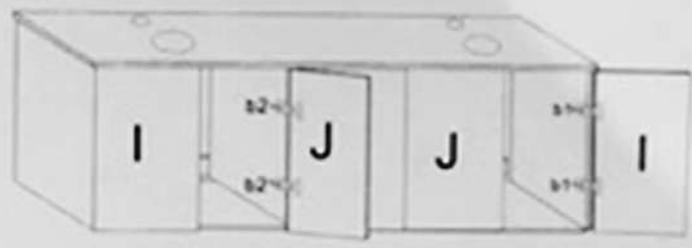

7



8

