






















## Black / White Malibu model
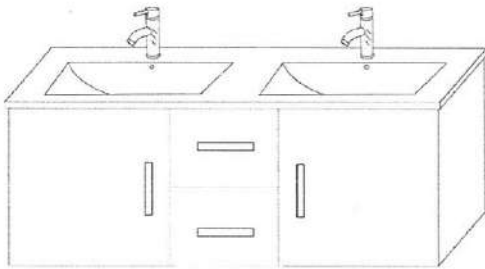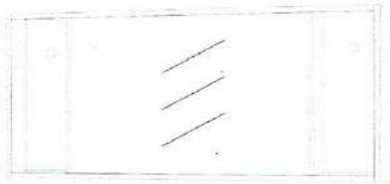
### Parts List

### Main cabinet

- Prior to installation, please check recieved items against the "Parts List".
- Please report any missing items to your retailer immediately.
- Professional installation recommended.



b		4x
a		4X
c		4x
d	M8*40mm 	32x
e	Φ16 	60x
g		60x
m		4x
n		4x
o		4x
p	M4*22mm 	8x
r	3.5x14mm 	72X
t		2x
y	Φ47x2mm 	2x
aa	Φ47x2mm 	2x
Ab	Φ47xΦ37x2mm 	2x
Ac	M4*50mm 	4x
ad	L400mm 	4x

### Tools List (Tools not included)



Electric drill



Tape measure



Silicone



Adjustable wrench



Drill bit



Pencil




Screwdriver




Spirit level

- Mark the position of the screw holes on the wall by measuring the space between the centers of the mounting brackets on the back of the vanity.
- Vertical position (X) is decided by the purchaser - remember to mark low enough to accommodate the sink on the top of the vanity counter or it will be too high when installed. Use a spirit level to ensure the screws holes are horizontal.

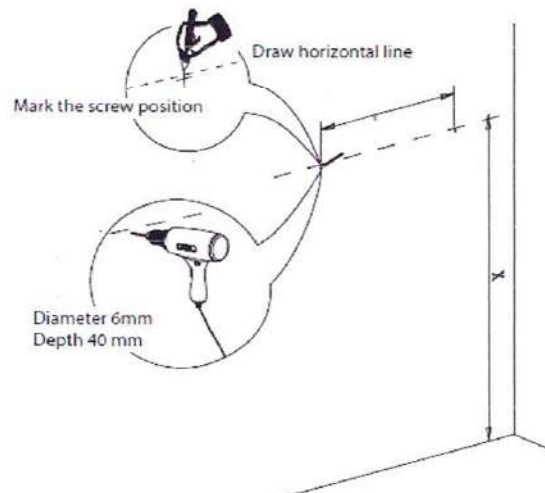








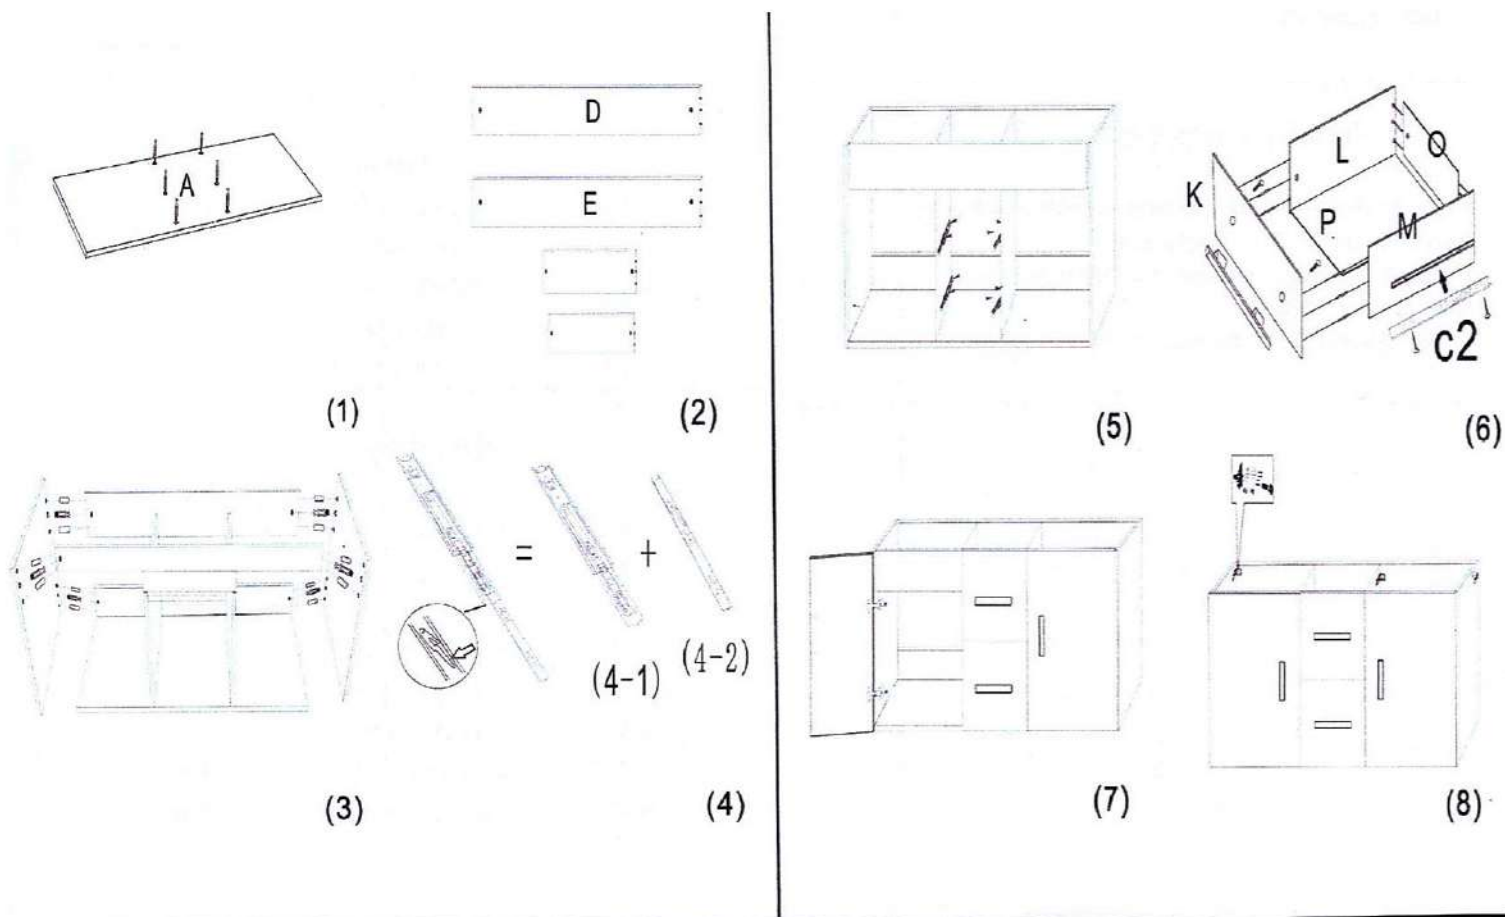





## Black / White Malibu model

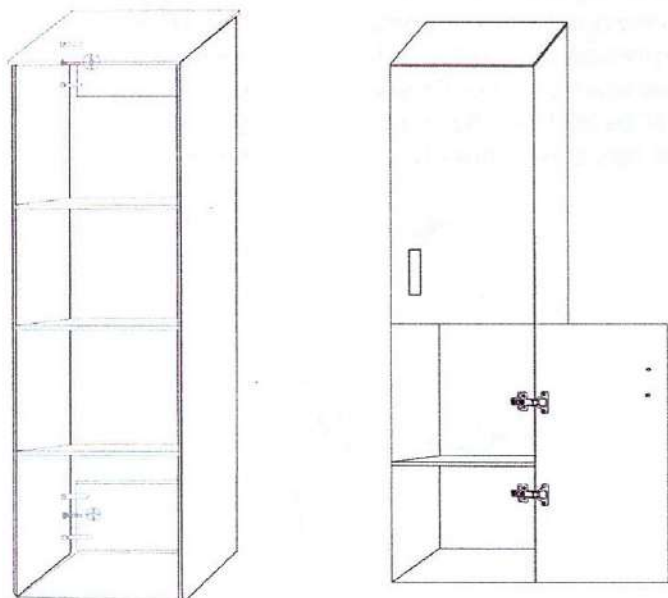

### Side cabinet

### Parts list



a		2x
b		4x
d	M7*40mm 	26x
e	Φ16 	28x
g		28x
r	3.5x14mm 	26x
i		4x
j		4x
k		4x
m	30mm 	4x